


# INSTALLATION INSTRUCTIONS

## ADAPTOR FOR FUEL LEVELS

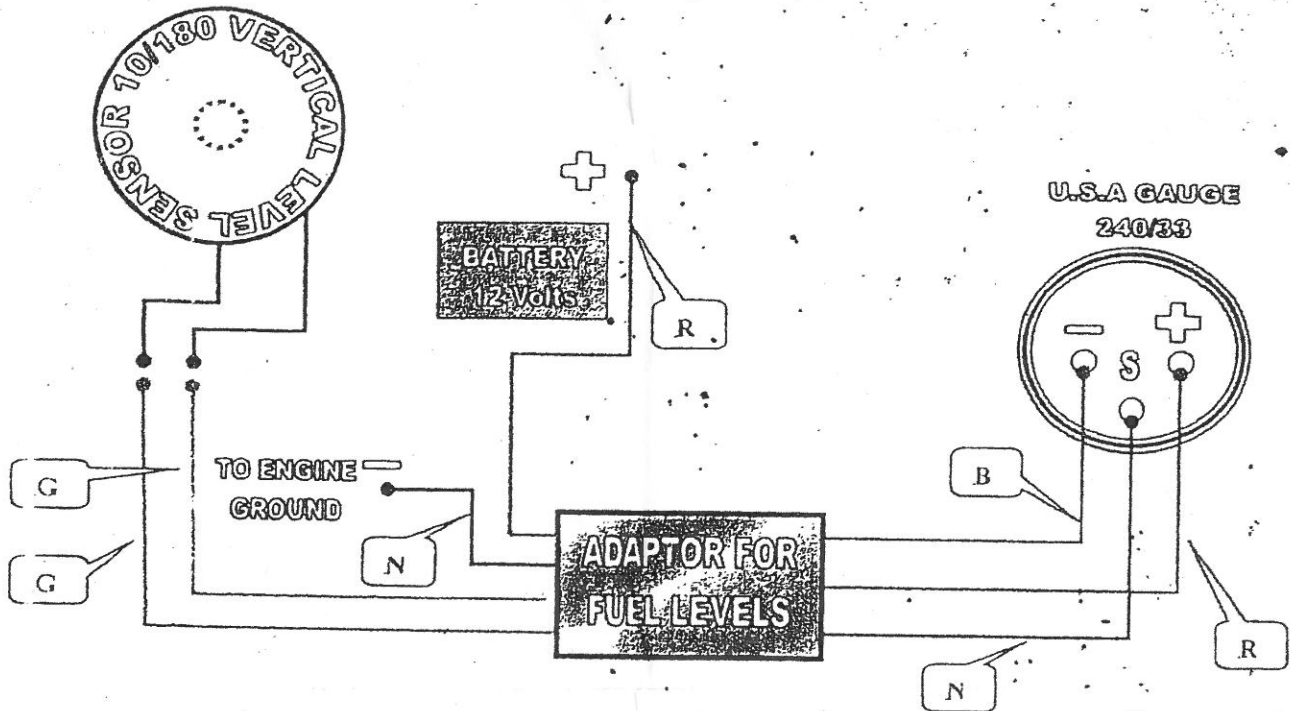

*This adaptor is used to make compatible a vertical-level sensor 10/180(ohms) and gauges 240/33(ohms).*

*It also stabilizes the sensibility of the level gauges that don't feel the boat movements.*

*This instrument doesn't work to put in reverse order of the frequency.*

*G=Grey colour*

*N=Black colour*

*B=Blue colour*

*R=Red colour*