

WIRELESS REMOTE TRANSMITTER

MODEL FEWL05-T

OPERATION INSTRUCTIONS

1. Switch On

Activate Wireless Remote Transmitter by pressing both "IN" and "OUT" buttons and holding on for 3 seconds.

2. Switch Off

Deactivate Wireless Remote Transmitter by pressing both "IN" and "OUT" buttons and holding on for 3 seconds.

3. Auto-switch Off

Wireless Remote Transmitter can automatically turn off in 2 minute(± 3 seconds)-standby to save battery.

4. Programming:

In 3 seconds.

5. Clear program

In 20 seconds.

6. Programming Instructions

- 1) Press both "IN"/"OUT" buttons and hold on for 3 seconds till LED indicator lights.

Press both "IN"/"OUT" buttons again and hold on for 3 seconds till LED indicator off.

Or the Transmitter can turn off automatically in 2 minute-standby.

- 2) Clearing and programming

The Receiver has to be powered on and the Transmitter is switched on.

Press both "IN"/"OUT" buttons and hold on for 20 seconds to clear the program when flashing LED Indicator turns on.

To press both "IN"/"OUT" buttons again for 3 seconds for programming. When LED indicator turns on the programming is done successfully. The wireless remote Transmitter can go for normal operation.

- 3) Clearing and programming must be done when the receiver is powered on and the Transmitter is switched on and must be fulfilled in 2 minutes.

If it is over 2 minutes, the Transmitter will turn off automatically.

The clearing and programming have to be repeated again as instructed above in 6.2).

- 4) Environmental interference

The remote control distance can be varied due to possible variation of environmental interference in winching operation.